




INSTALLATION DRAWINGS




Call 519-200-9651 • www.StormflowSurfacing.ca

NEW PATIO, SIDEWALK, TRAIL, CART PATH

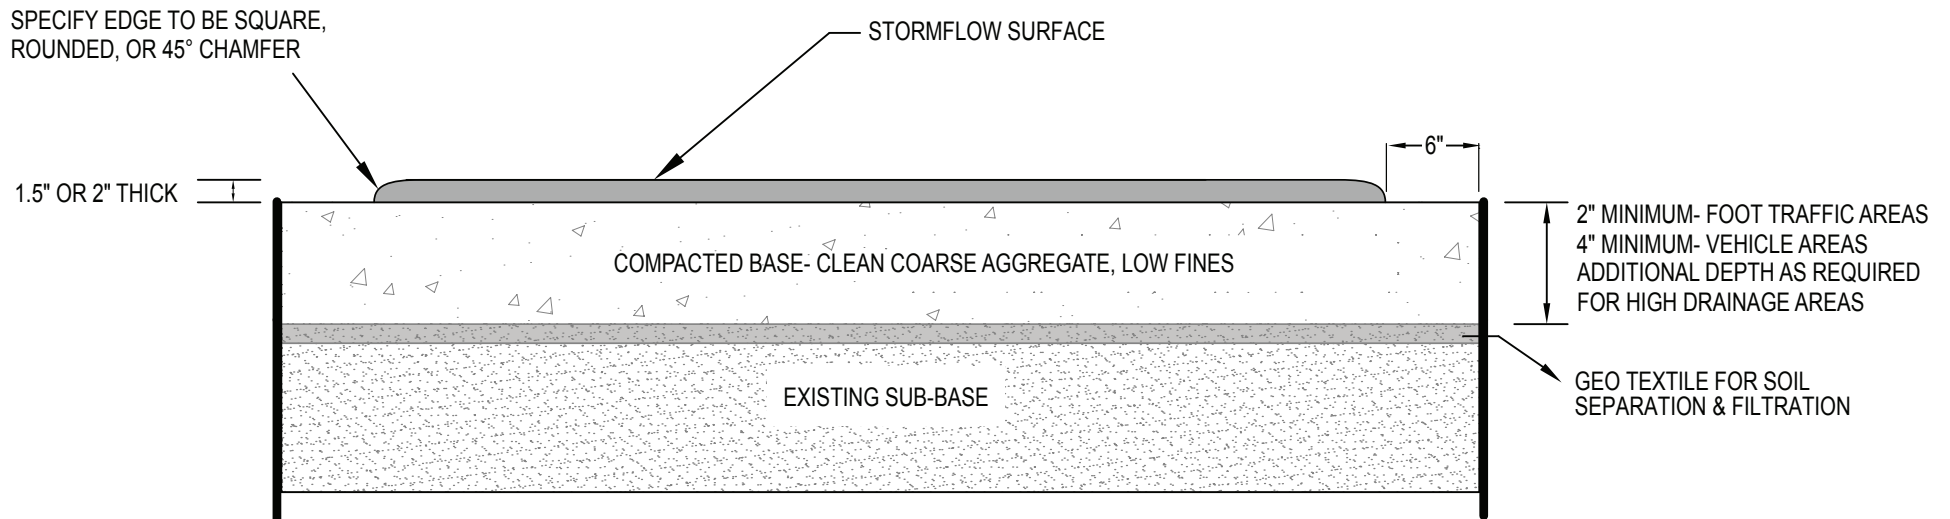

Call 519-200-9651 • www.StormflowSurfacing.ca


STORMWATER INFILTRATION STRIP

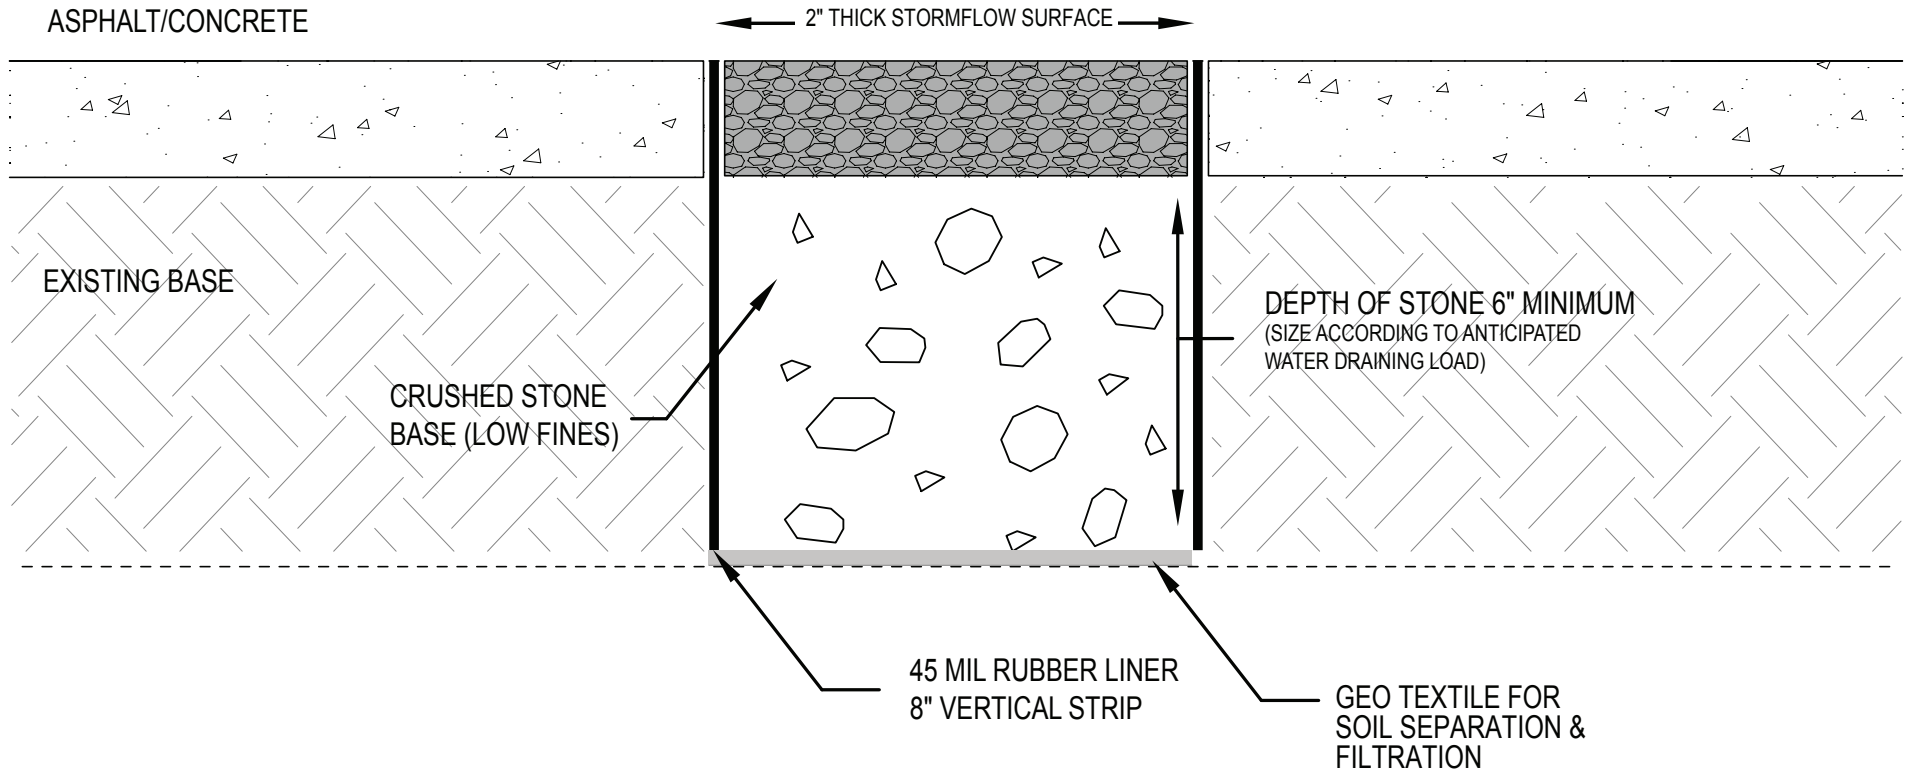


Stormflow
SURFACING™

Call 519-200-9651 • www.StormflowSurfacing.ca

STORMWATER INFILTRATION STRIP WITH DRAINAGE

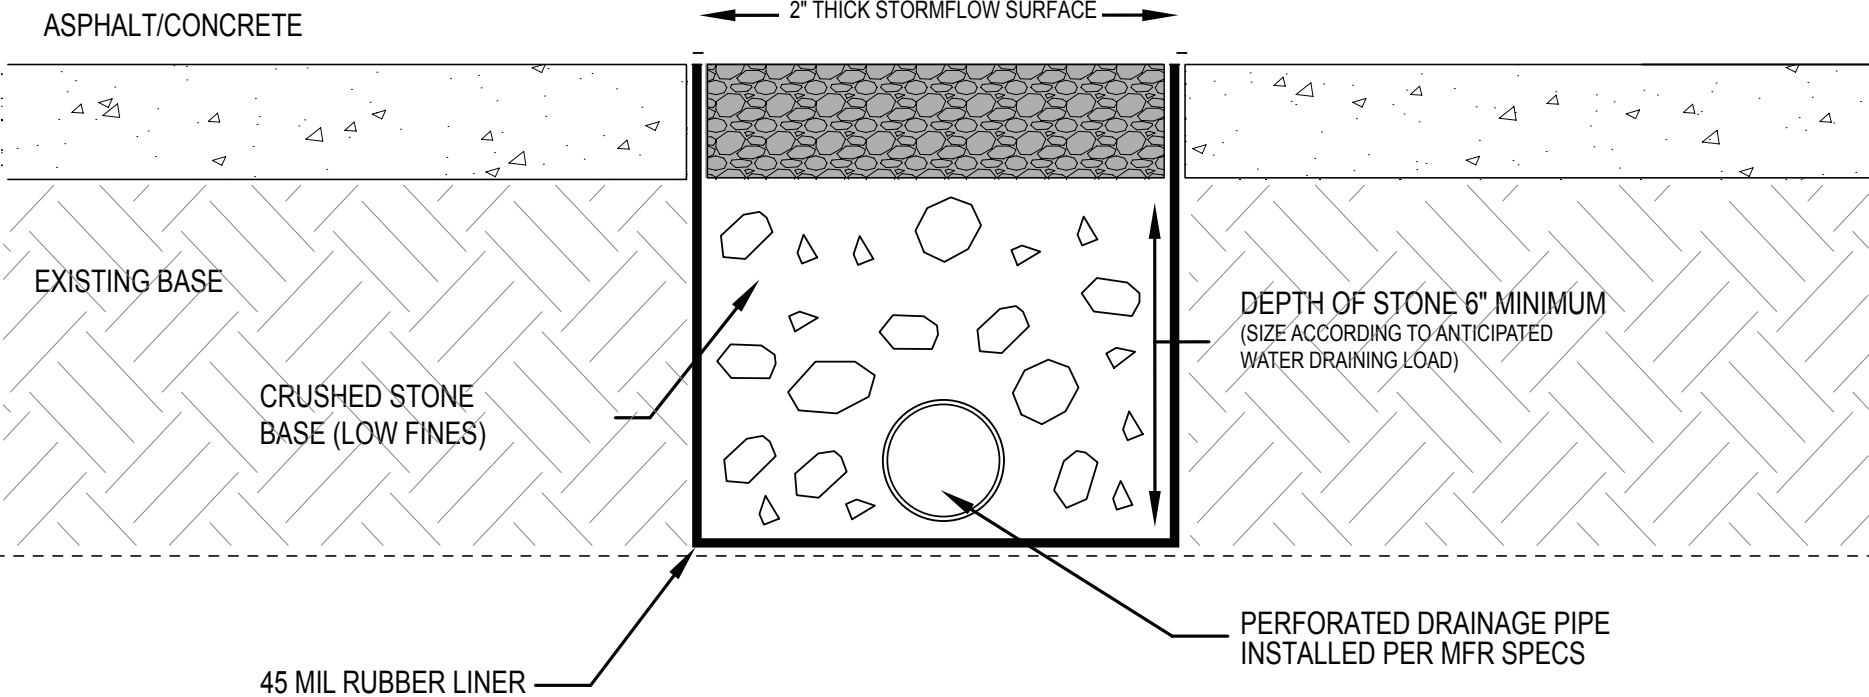


PERMEABLE TREE SURROUND

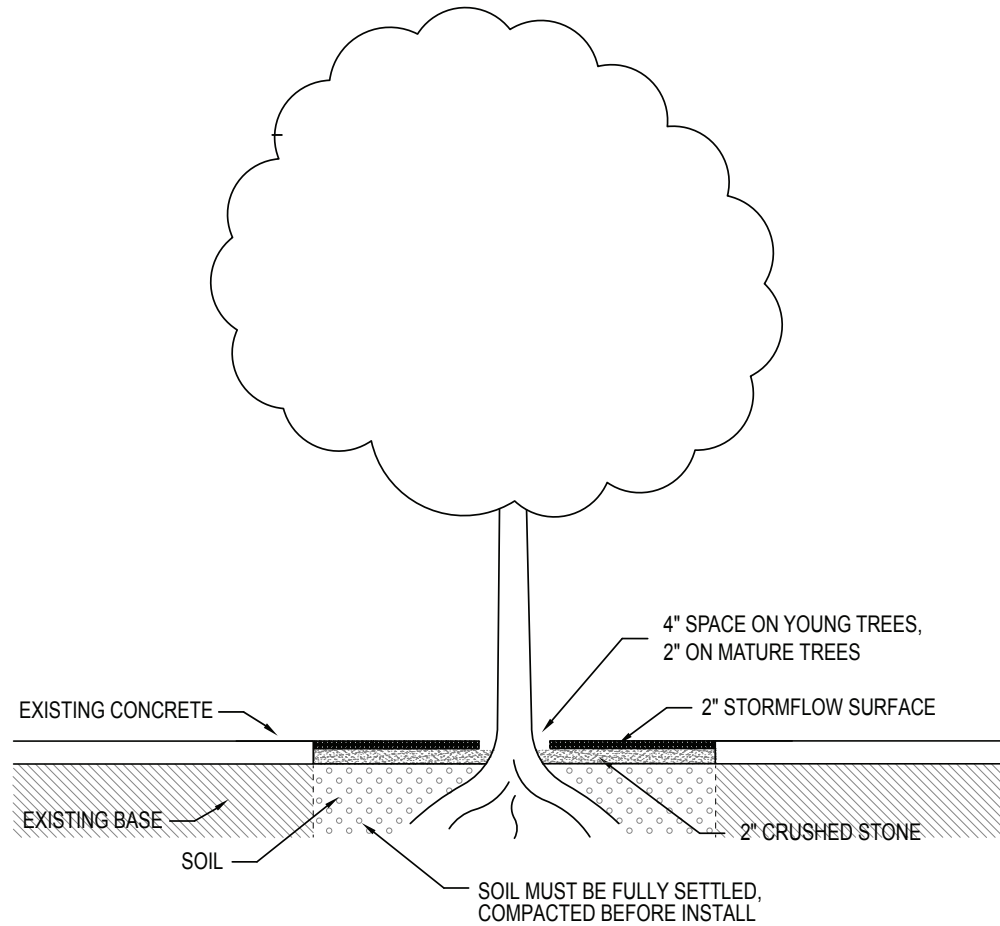

Stormflow
SURFACING™

Call 519-200-9651 • www.StormflowSurfacing.ca

TOP COAT EXISTING SURFACE

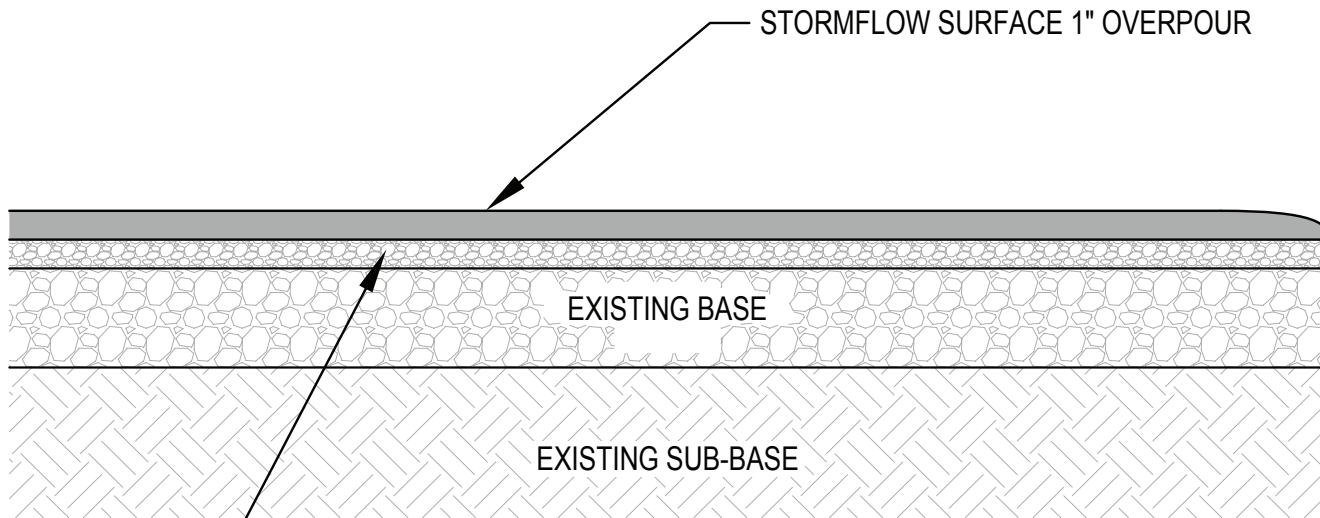


- EXISTING ASPHALT / CONCRETE / BRICK / PAVERS
- SMOOTH COATED SURFACES SHOULD BE ROUGHED UP FOR PROPER ADHESION
- PRESSURE WASH TO REMOVE DIRT/MOSS ETC.
- SURFACE MUST BE DRY



Call 519-200-9651 • www.StormflowSurfacing.ca

TOP COAT AND WIDEN EXISTING SURFACE

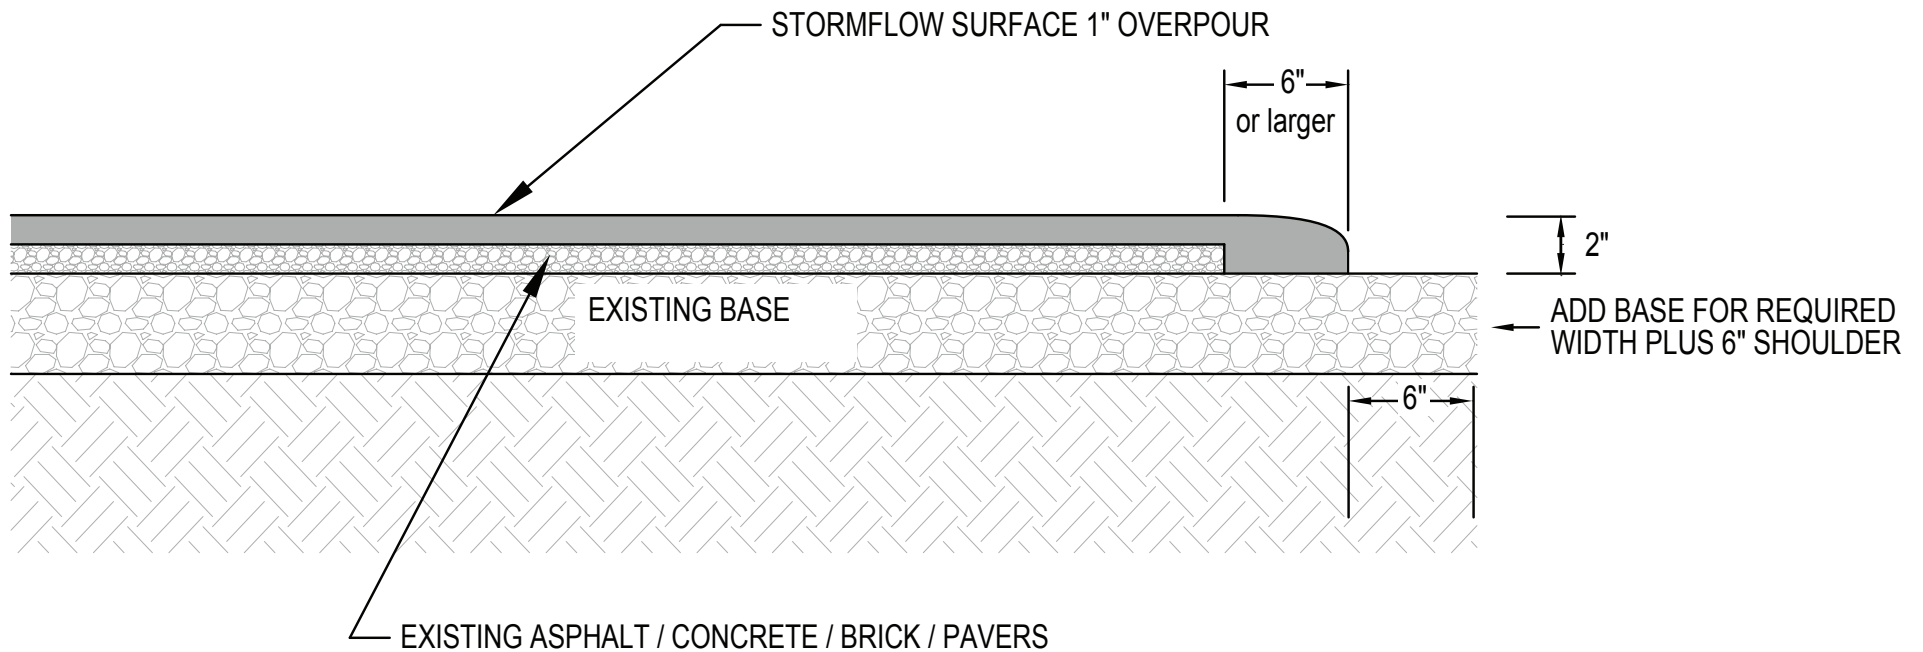

Call 519-200-9651 • www.StormflowSurfacing.ca